

# Mobile Harbour Crane HMK 260 E

## Operating Manual

### Lifting Capacity Chart

2.2

### Capacities

Radius	Normalload	Spreader	< 50 %
(m)	(t)		
10	45,0	35,0	28,0
11	45,0	35,0	28,0
12	45,0	35,0	28,0
13	45,0	35,0	28,0
14	45,0	35,0	28,0
15	45,0	35,0	28,0
16	45,0	35,0	28,0
17	45,0	35,0	28,0
18	45,0	35,0	28,0
19	45,0	35,0	28,0
20	45,0	35,0	28,0
21	45,0	35,0	28,0
22	45,0	35,0	28,0
23	45,0	35,0	28,0
24	45,0	35,0	28,0
25	45,0	35,0	28,0
26	45,0	35,0	28,0
27	45,0	35,0	28,0
28	45,0	35,0	28,0
29	44,0	35,0	28,0
30	42,0	33,4	28,0
31	40,0	31,4	28,0
32	38,0	29,4	27,0
33	36,5	27,9	25,5
34	35,0	26,4	24,5
35	33,5	24,9	23,5
36	32,5	23,9	22,5
37	31,0	22,4	21,5
38	30,0	21,4	20,5
39	29,0	20,4	20,0
40	28,0	19,4	19,5
41	27,0	18,4	19,0
42	26,0	17,4	18,5

The lifting capacities in the columns are to be understand as follows:

1. Normal load, Heavy / Special load = Load in the ropes
2. Container load = Load under the spreader